 


# Philips Audio CD Recorder CDR 600: Getting started...

English

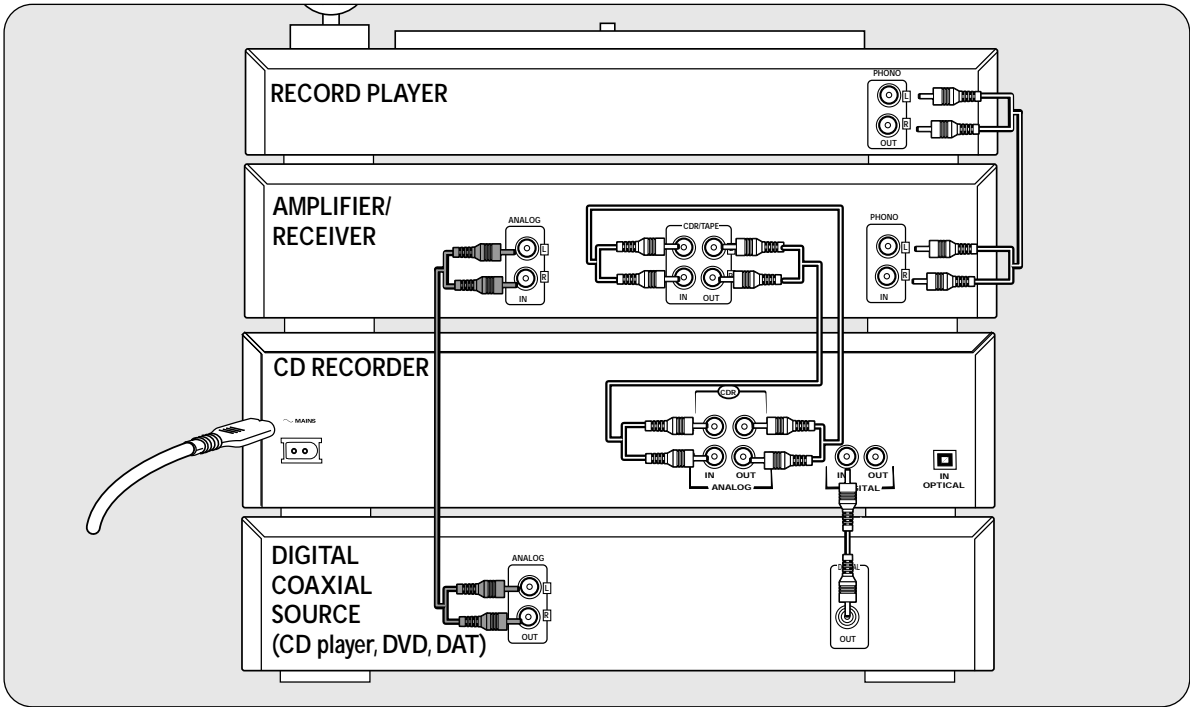

## General information

*This Quick Installation Card gives a rough overview and helps to quickly start with basic steps. Please read the supplied instruction manual for detailed information.*

## Mains

- 1 Check whether the mains voltage as shown on the type plate corresponds to your local mains voltage. If it does not consult your dealer or service organization.
- 2 **After all connections have been made** connect the mains cable to AC MAINS~ and to the wall socket. This switches on the mains supply.

**To disconnect the set from the mains completely, remove the mains plug from the wall socket.**

## Discs for recording

Use discs with the "Digital Audio" logo only:

- CD-Audio Recordable (CDR) discs, or
- CD-Audio ReWriteable (CDRW) discs.

Do not use computer CDR(W)s as recording would not work properly.

 


## Discs for playback

disc:\nplayback in:	standard\nCD player	CDRW\ncompatible\nCD player	Philips\nCDR 600
finalized CDR	•	•	•
finalized CDRW		•	•
unfinalized CDR\nor CDRW			•


# Philips Audio CD Recorder CDR 600: Getting started...

## Playing a CD

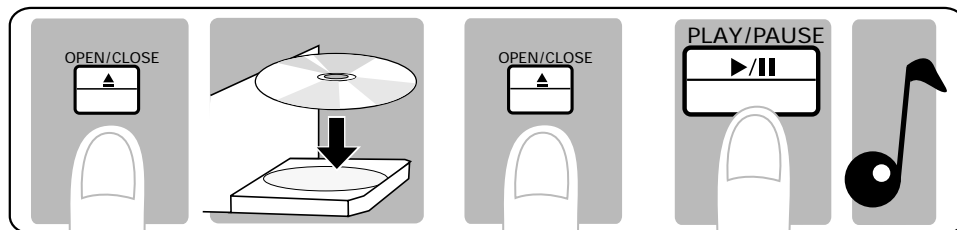


- 1 Press OPEN/CLOSE . Insert a CD into the CD recorder tray.
- 2 Press OPEN/CLOSE to close the tray.
- 3 Press PLAY/PAUSE to start playback.

## Recording an entire CD

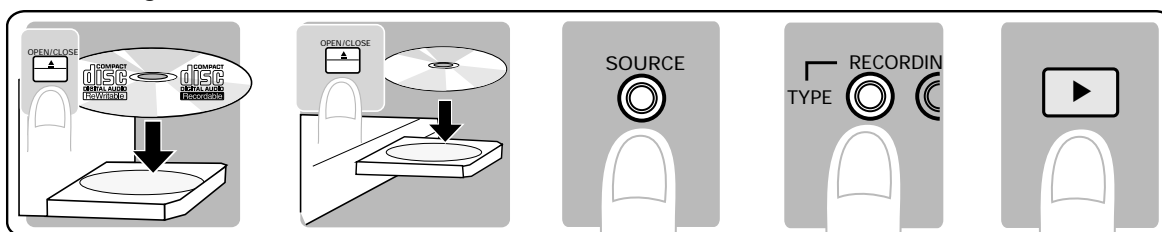 


- 1 Insert a blank Audio CDR(W) into the CD recorder tray.
- 2 Insert the CD to be copied into the tray of the external CD player.
- 3 Press SOURCE to select the correct input connection.
- 4 Press TYPE once.
- 5 Press PLAY on external CD player to start recording.

## Recording a single track

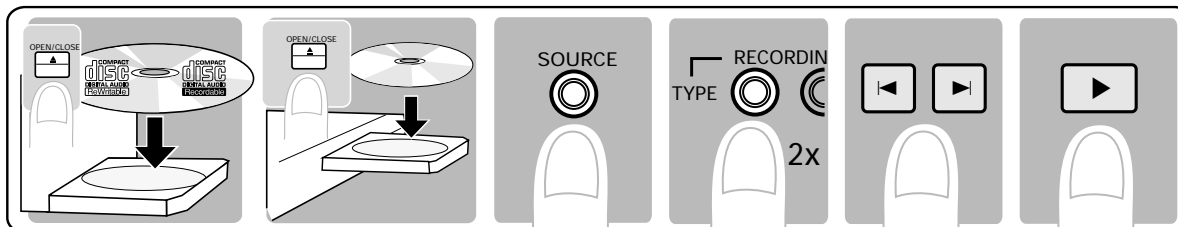 

- 1 Insert a blank Audio CDR(W) into the CD recorder tray.
- 2 Insert a CD into the tray of the external CD player.
- 3 Press SOURCE to select the correct input connection.
- 4 Press TYPE twice.
- 5 Select the track on the external CD player.
- 6 Press PLAY on external CD player to start recording.

## Finalizing manually

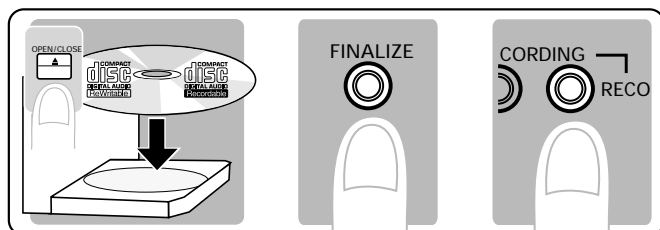 

- 1 Insert the CDR(W) to be finalized into the CD recorder.
- 2 Press FINALIZE.
- 3 Press RECORD to start the finalization.